


Connection diagram of the DC to pulse width internal reference voltage used as control voltage.

K8004

i

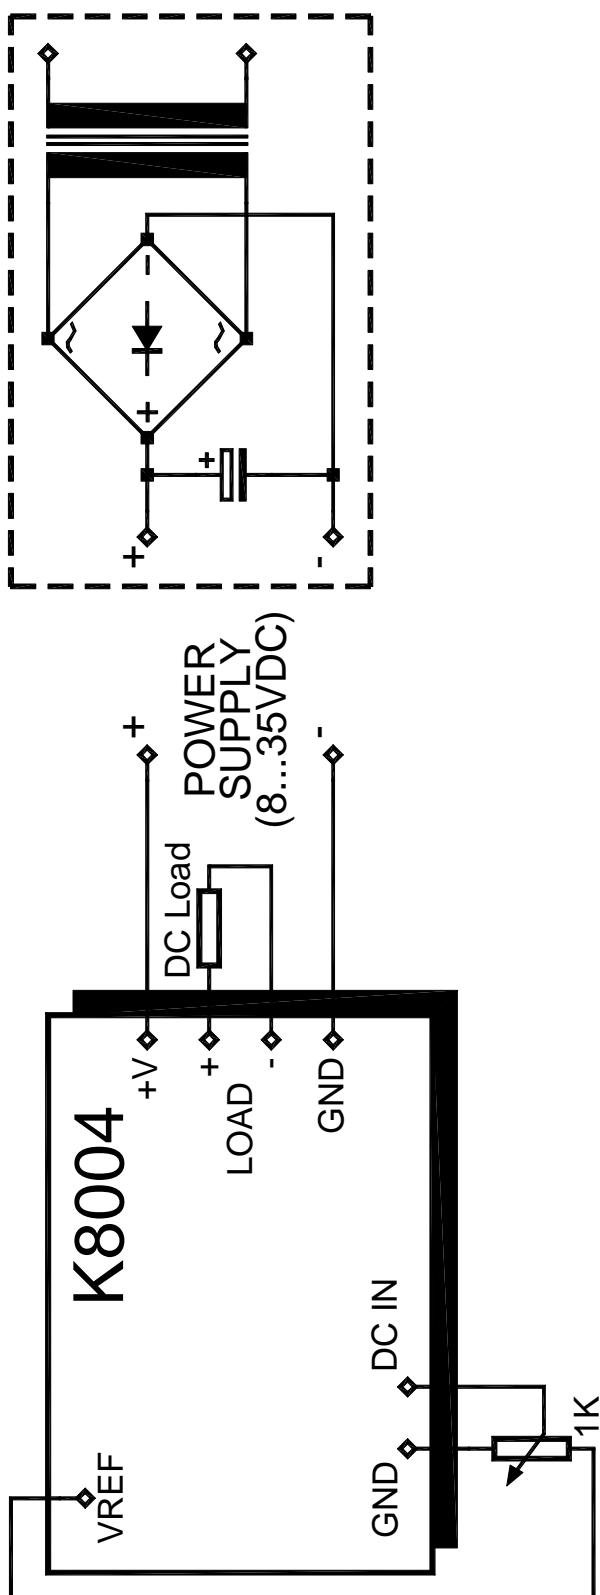

VELLEMAN®-KIT HIGH-Q